



It's not magic, it's engineering.®

Impact Sound Control

GENIEMAT[®]


Simple Installation Guide

GENIE[®]MAT

Simple Installation Guide

PREPARATION

- i. Attach **GenieMat PMI** to base of wall (refer to **Figure 1**).

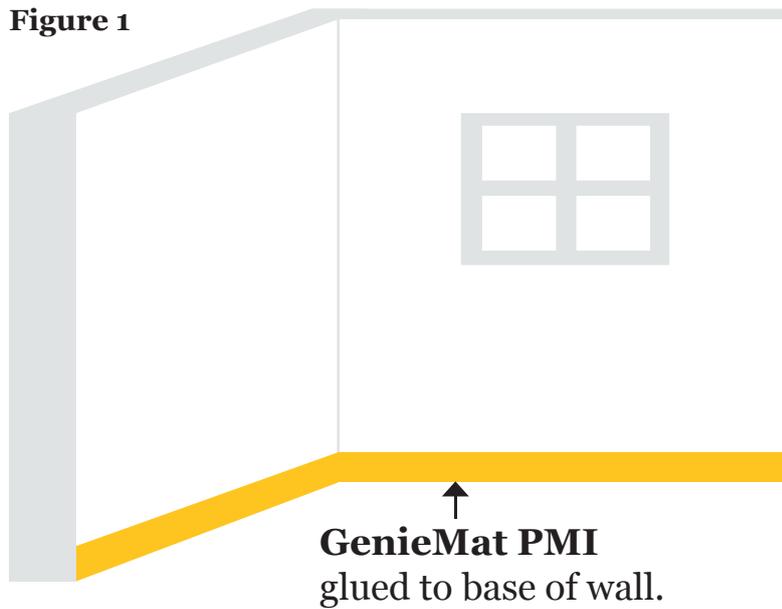

- ii. Unroll and place **GenieMat** underlayment perpendicular to subsequent installation direction of finished floor (refer to **Figure 2**).

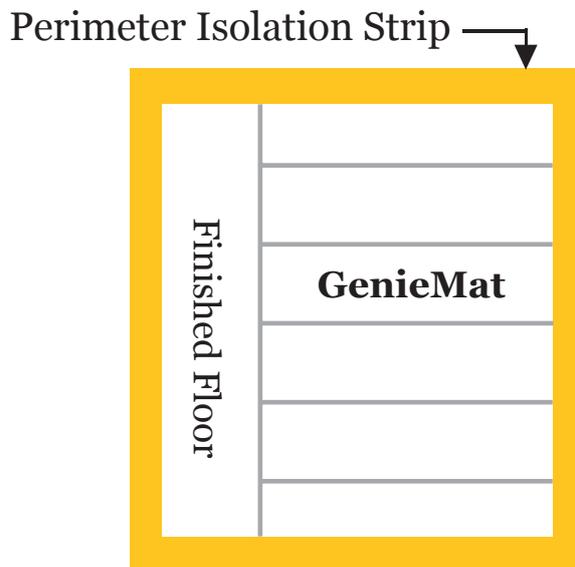


Figure 2

-
- iii. Trim ends of each section to fit floor surface area.
 - iv. Align lengthwise edges of underlayment with neighbouring sheets by butting up or overlapping them.
 - v. Determine whether installation will be glue-down or floating floor and follow corresponding instructions.

FLOATING FLOOR INSTALLATION

- i. Use duct tape or high-quality carpet tape to secure butt joints and seams, and prevent underlayment from moving.
- ii. Proceed to Finished Floor Installation.

GLUE DOWN INSTALLATION

- i. Fold over first sheet of underlayment halfway lengthwise.
- ii. Spread adhesive using appropriate notch trowel and **GenieMat® FAS** adhesive (refer to **GenieMat FAS** product spec guides).
- iii. Spread adhesive perpendicular to seam (refer to **Figure 3**).
- iv. Carefully lay underlayment on adhesive.
- v. Fold over second half of first sheet and first half of second sheet.

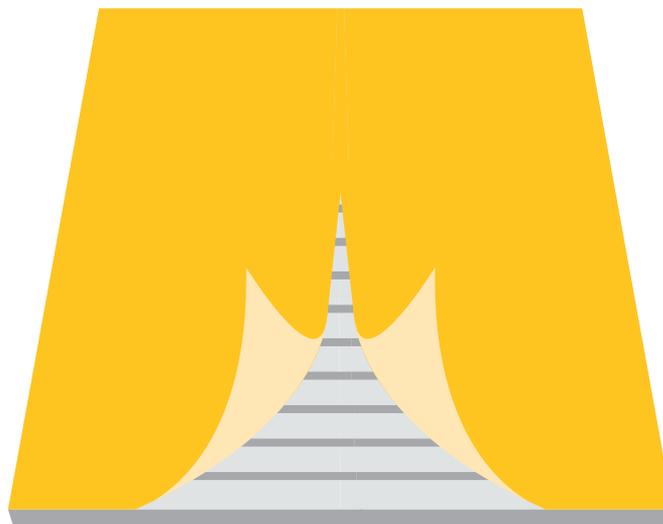


Figure 3


-
- vi. Continue this process for each consecutive sheet.
 - vii. Use a 15 kg to 25 kg roller over sheets to ensure proper transfer of adhesive.
 - viii. Provide enough time to allow adhesive to set before installing finished floor.

FINISHED FLOOR INSTALLATION


- i. Install all finished floors according to manufacturer's recommendations.
- ii. If installing a floating floor, interlock or glue planks together without gluing the planks to the underlayment.
- iii. If manufacturer recommends installation of plywood or cement board between underlayment and finished floor, adhere board to underlayment.
- iv. DO NOT nail or screw through the underlayment.
- v. Adhere all finished floors using appropriate notch trowel and **GenieMat® FAS** (refer to **GenieMat FAS** product spec guides).
- vi. Alternate adhesives recommended by manufacturer shall be pre-approved by **Pliteq®** Technical Services.
- vii. Install grouted flooring materials in a thin or thick-set mortar bed applied directly over underlayment.
- viii. Tile and stone sizes smaller than 100 mm x 100 mm shall be pre-approved by **Pliteq** Technical Services.

BASEBOARD INSTALLATION

- i. Trim excess **GenieMat® PMI** perimeter isolation strip flush or below surface of finished floor (refer to **Figure 4**).

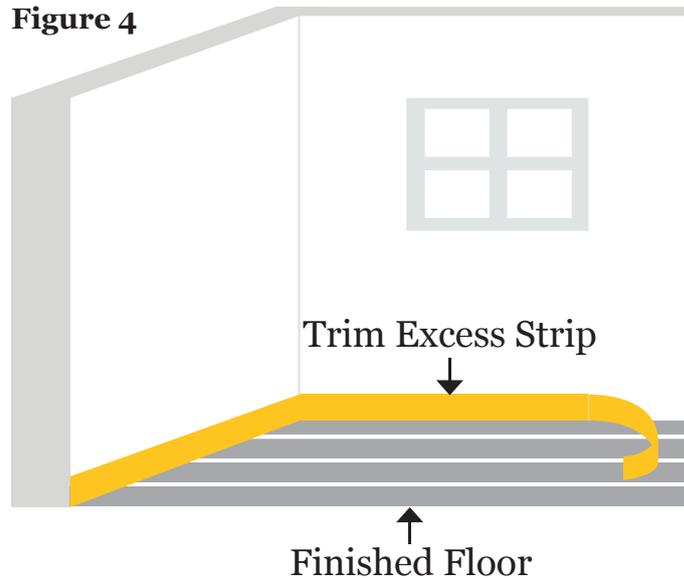

- ii. Install baseboard to wall 6 mm (min.) above **GenieMat PMI** and finished floor (refer to **Figure 5**).
- iii. Do not allow baseboard to touch finished floor.

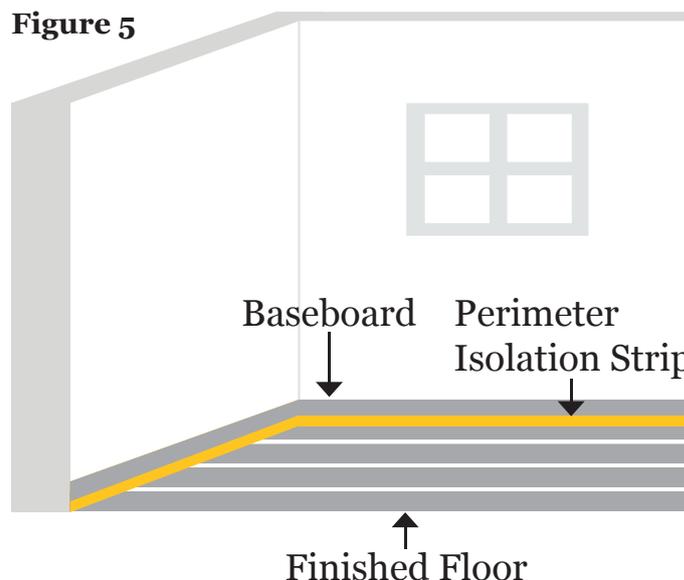

CONTACT Us

For Your Project Specific Questions

UK +44 1223 257770 | **Asia Pacific** +65 8452 6865 | **Middle East** +971 4 813 5501

E. info@pliteq.co.uk

© Pliteq (UK) LTD. 2020.

08.20 [®]™ Trademarks of Pliteq Inc. The information provided is accurate to the best of our knowledge at the time of issue. However, we reserve the right to make changes when necessary without further notification. Suggested application may need to be modified to conform with local building codes and conditions. We cannot accept responsibility for products that are not used, or installed, to our specifications. All listed dimensions are nominal.



www.pliteq.co.uk